

MASTER
Water Conditioning Corp.

www.masterwater.com

Installation and Operation Manual



MP-MBA-45T-1/60T-1 / 75T-1 with the 268/762 Logix Control Valve

July 2006

Table of Contents

Page No.	Topic	Description
1	Model # and Packaging	Packaging Information
	Component Packaging Description	Packaging Description
	MP Logix Control Valve	Valve Description
2	MP Softening System	System Positioning
3	Logix 268/762 Control Valve	Attaching Valve to Tank Figure 1 & Figure 2
4	Service & Drain Piping, General Installation Layout	Drain Piping Figure 3
	Drain Flow Rate	Flow Rate During Regeneration
5	System Schematic	Piping Layout
6	Electrical Supply	Electrical Requirements
	Brine Tank / Brine Tubing	Brine tank w/shut off
7	Logix 268/762 Control Valve Electrical Connection	Instructions on Logix 762 Electrical Connection
	Filling Softener with Water	Details for Filling Softener Tank with Water
8	Filling Softener with Water Continued	Details for Filling Softener Tank with Water Continued
	Logix 762 Control Valve Timer Settings	Setting the Timer
9	Logix 762 Control Valve Timer Settings Continued	Setting the Timer Continued
10	Logix 762 Control Valve Timer Settings Continued	Setting the Timer Continued
	Final Check	Final Installation Check
	Disinfection	Disinfection of Conditioner
11	Troubleshooting	Symptom / Cause / Solution
12	Troubleshooting	Symptom / Cause / Solution
13	Troubleshooting	Symptom / Cause / Solution
14	ERR Troubleshooting	Error Troubleshooting
15	268/762 Valve Body Schematic	Parts View
16	Valve Body Parts List	Part Numbers List
17	Logix Parts List	Part Numbers List
18	Warranty	Warranty

Installation and Operating Instructions for
268/762 Logix
Top Mount Water Softener

Model #:

_____	MP-MBA-45T-1	1.5 CF Water Softener
_____	MP-MBA-60T-1	2 CF Water Softener
_____	MP-MBA-75T-1	2.5 CF Water Softener

Shipping Carton Description / unit:

# of cartons	Contents	Description
1	Mineral tank	Distributor pipe installed
1	Brine tank	464 shutoff valve assembly. *NOTE: 268/762 Logix valve is shipped in brine tank.
1	268/762 Logix control valve	268/762 timer and backwash flow control and bypass with 1" copper or pvc connection
	C-800	1-cubic foot boxes
	C-800	1/2- cubic foot boxes

System Description:

The softener tank has a Logix top mounted automatic control valve with an impulse meter to initiate regeneration. The Logix Valve is constructed of non-corrosive Noryl® material and is rated at a maximum working water pressure of 100 psi. This softener includes a manually operated bypass device which enables the softener to be isolated from the water service lines for maintenance and service while maintaining the continuity of the (untreated) water supply. It uses a 762 microprocessor based timer in conjunction with an internal impulse meter to actuate regeneration in the following ways:

- a. Microprocessor based water meter to initiate regeneration
- b. Manual regeneration button to start an emergency regeneration
- c. Calendar day override

NOTE: THIS SOFTENER IS NOT INTENDED TO BE USED FOR TREATING WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION WHETHER BEFORE OR AFTER THE SYSTEM.

NOTE: The Models MP-MBA-45T-1 and MP-MBA-60T-1 has been tested and certified by the Water Quality Association according to NSF/ANSI 44 for the specific performance claims as verified and substantiated by test data as follows:



MP-MBA-45T-1 Rated Efficiency: 4590 Grains per pound of salt
5.25 lbs salt: 24.1 Kg Capacity
13.5 lbs salt: 47.3 Kg Capacity
22.5 lbs salt: 54.6 Kg Capacity
Rated Service Flow: 10.0 GPM @ 14.5 psi pressure drop
Resin: 1.5 CU FT cation exchange resin

MP-MBA-60T-1 Rated Efficiency: 4250 grains per pound of salt
5.0 lbs salt: 21.3 Kg Capacity
12.0 lbs salt: 39.8 Kg Capacity
20.0 lbs salt: 46.0 Kg Capacity
Rated Service Flow: 15.0 GPM @ 14 psi pressure drop
Resin: 2.0 CU FT cation exchange resin

Water Softener Positioning:

1. Place water softener in desired position, far enough from walls and other obstructions to allow for servicing the unit.
2. Place the water softener within reasonable access to a grounded 115V/60 HZ circuit and a legal drain line connection.

Water Softener Tank Loading:

(MP-MBA-45T-1 and the MP-MBA-60T-1 are preloaded at the factory)


1. Remove yellow caplug from top of tank. DO NOT CUT white riser tube. Tube was prefitted at the factory.
2. Center the distributor and make sure it is resting on the bottom of the tank. The top of the distributor pipe will extend above the top of the tank (this was prefitted at the factory).
3. Cover the top opening of the distributor pipe before filling the tank with media.
4. Pour the C-800 provided with the unit into the top of the tank. See page one for your specific model number unit to determine the amount of media to load into the mineral tank.
5. Remove the material used to cover the top opening of the distributor pipe.

Logix Control Valve:

1. When facing the front of the Logix timer, the inlet connection (**Figure 1**) is located on the left and the outlet connection is on the right. The control valve's inlet and outlet connections are either 1" copper or pvc equipped with gasket and nut.

Figure 1


Left Side Right Side

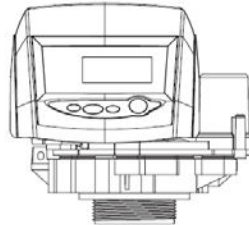

Install the 268 bypass valve (**See Figure 2**) with inlet and outlet handles facing upward. Place gasket into nut and secure 1" copper or pvc tail piece with a nut. Repeat the procedure for the outlet connection.

DO NOT OVERTIGHTEN THE NUT.

Figure 2

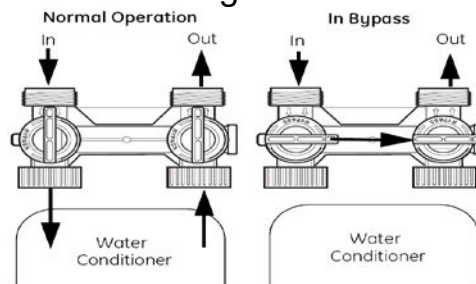

2. The control valve's drain connection is 3/4" npt and is located on the back of the control valve.
3. Turn the control valve upside down and ensure that the control valve o'rings are in place. Use silicone lubricant on the o'rings.
4. Place the control valve onto the distributor pipe.
5. Thread the control valve hand tight to 20 foot pounds!

DO NOT OVERTIGHTEN!


****DO NOT USE PETROLEUM!****

****USE ONLY SILICONE ****

Service and Drain Piping:

1. Pipe water softener into the service lines .The inlet and outlet connections of the control valve are 1" copper or pvc and are located on the back of the valve body. As you face the timer the inlet is on the left and the outlet is on the right. Always follow local plumbing codes when installing our water treatment equipment.
2. If sweat fittings are used, be sure soldering is done in such a manner as not to allow heat to reach the control valve or bypass. (If Schedule 80 PVC is used make sure to follow the proper primer and solvent instructions.)
3. The drain line connection is located on the back of the valve as you face the timer. It is recommended you install a $\frac{3}{4}$ " union on the drain line for servicing. The drain line must be of adequate size to allow for full regeneration flow.

FIGURE 3

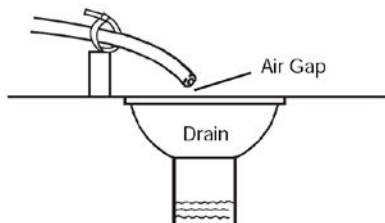

The drain flow rate during regeneration (backwash) will be:


MP-MBA-45T-1	2.5 GPM
MP-MBA-60T-1	4.8 GPM
MP-MBA-75T-1	4.8 GPM

- The control valve drain connection is $\frac{3}{4}$ " npt.
- Never decrease the drain piping size to below $\frac{3}{4}$ "
- Maximum drain line length is 30 feet.
- Maximum drain line height is 6 feet above the control valve.
- The drain line must be piped to an open air gap (See Figure 3)
- Always follow local plumbing codes.

UNDER NO CIRCUMSTANCES SHOULD THERE BE A DIRECT CONNECTION WITH SANITARY SEWAGE FACILITIES.



Typical Piping Layout

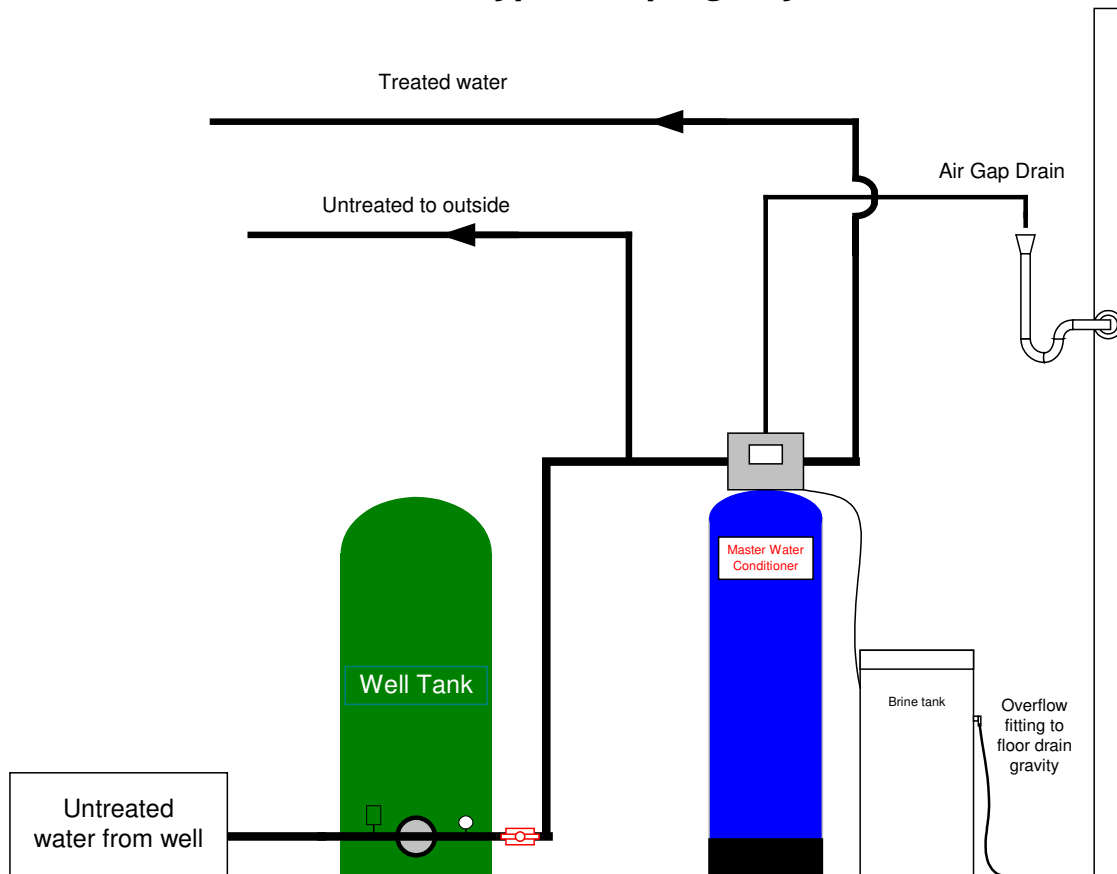

NOTE: All Master Water Conditioners must be installed after the well tank or water meter if its public water supply.

Temperature: MAX: 120 F, MIN: 34F
Pressure: MAX: 100 PSI, MIN: 20 PSI
Electrical: 115V/ 60 HZ

Electrical Requirements:


Always follow all local electrical codes when installing our water treatment equipment.

1. Provide an 115v/60Hz properly grounded dedicated electrical outlet. (It's very important that the polarity be correct)
Avoid using outlets that are switch controlled.
2. Maximum amperage required is 5 amps.
3. Make sure the electrical service provides power 24 hours per day.
We recommend installing a **surge protector** to protect unit from power surges, which are not covered by warranty.


Brine Tank:

1. The brine tank should be located directly beside the water softener mineral tank.
2. Connect the 3/8" poly tubing to the 3/8" white elbow compression fitting located on the right side of the Logix control valve.

See Figure Below.

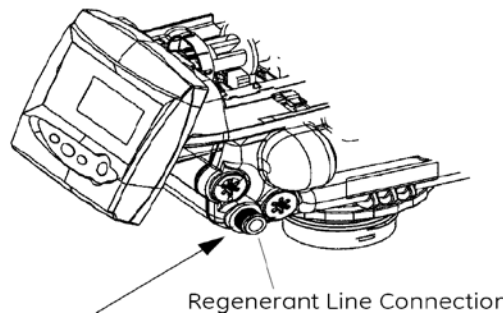


The 464 brine shutoff valve contains a float that controls the water level in the brine tank. The float height was preset at the factory.

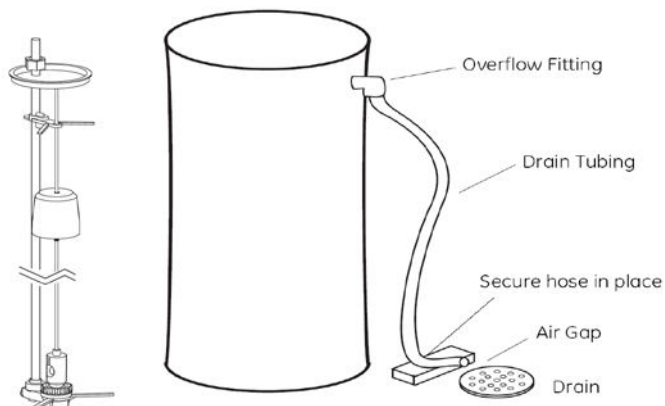

Logix Control Valve Electrical Connection:

Note: Do not touch the wiring harness between the Logix timer and the motor, it's positioning is critical and therefore already installed at the factory.

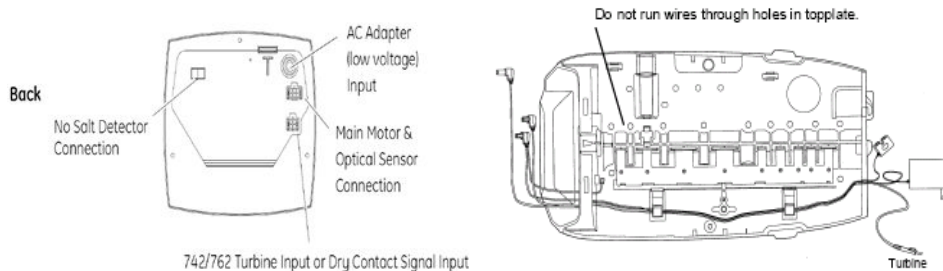

1. Remove plastic control valve cover by spreading sides while lifting.
2. Plug transformer into back of timer following existing wires.
3. Plug transformer into a properly grounded 120V/60 HZ electrical outlet.
4. The screen will now change between the “Gallons Remaining to Regeneration” and the current “Gallons per Minute” (gpm) flow rate.

Filling Water Softener with Water:

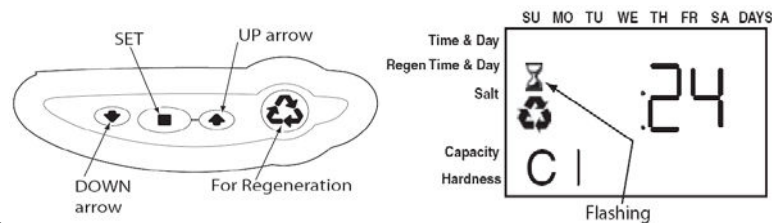


Figure 4

1. Push the FOR REGENERATION button (**Figure 4**) on the controller down for 5 seconds. This will initiate a manual regeneration. You will notice a flashing hour glass during regeneration.

The controller will indicate that the motor is turning the camshaft to cycle C1 (BACKWASH). The controller will indicate the total regeneration time remaining. Filling tank in this position allows air to escape from drain.

Open the bypass inlet valve ¼ turn and allow water to flow into the mineral tank at a slow rate.

Warning: IF WATER ENTERS THE TANK TOO FAST, ALL THE RESIN WILL BE FLUSHED TO DRAIN DURING START UP.

2. When water is running steadily at the drain, open the bypass valve's inlet and outlet to their maximum position.
3. Simultaneously press the SET and UP buttons on the controller for 1 second then release, the motor will advance the cam to C2. Once C2 is displayed simultaneously press the SET and UP buttons on the controller for 1 second then release, the motor will advance the cam to C3. Repeat this procedure until the timer enters the C7 (FAST RINSE) position. The softener will go through the rinsing cycle and then automatically advance to (BRINE REFILL) C8 and fill the brine tank with the proper amount of water.
4. The control valve will advance to C0 (REGENERATION COMPLETE) and Time of Day will be displayed. This is treated water.

Regeneration Cycles:

- C1 – Backwash
- C2 – Regeneration Draw/Slow Rinse (not used in filter mode)
- C3 – Slow Rinse (not used in filter mode)
- C4 – System Pause (to repressurize tank)
- C5 – Fast Rinse cycle 1
- C6 – Backwash cycle 2 (not used in filter mode)
- C7 – Fast Rinse cycle 2 (not used in filter mode)
- C8 – Regenerant Refill (not used in filter mode)

Logix Control Valve Timer Settings:
(See Figure 5)

Note: The control valve is set at the factory. You only need to set the hardness, time of day and regeneration time if required, which is preset at 2 am.

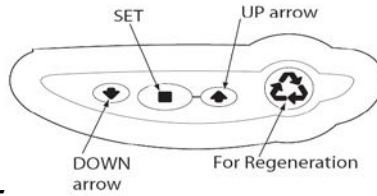


Figure 5

Time of Day Setting

- 1) Press the SET button. The screen will show the Time of Day in blinking numbers.
- 2) To change the Time of Day, use the UP or DOWN arrows.
- 3) Press the SET button.

Day of Week Setting

- 1) Press the SET button. The screen will show the Day of Week in blinking triangle.
- 2) To change the Day of Week, use the UP or DOWN arrows.
- 3) Press the SET button.

Time of Regeneration Setting (the factory default is 2 AM)

- 1) Press the SET button. The screen will show the Time of Regeneration in blinking numbers.
- 2) To change the Time of Regeneration, use the UP or DOWN arrows.
- 3) Press the SET button.

Regeneration Day Override Setting (the factory default is 0)

- 1) Press the SET button. The screen will show the Regeneration Day Override in blinking numbers.
- 2) To change the number, use the UP or DOWN arrows.
- 3) Press the SET button.

Salt Amount Setting

- 1) Press the SET button. The screen will show the Salt Amount as pounds in blinking numbers.
- 2) **DO NOT CHANGE THE NUMBER.**
- 3) Press the SET button.

Softening Capacity Setting

- 1) Press the SET button. The screen will show the Capacity as grains in blinking numbers.
- 2) **DO NOT CHANGE THE NUMBER.**
- 3) Press the SET button.

Hardness Setting (the factory default is 10)

- 1) Press the SET button. The screen will show the Hardness as grains per gallon in blinking numbers.
- 2) To change the number, use the UP or DOWN arrows.
- 3) Press the SET button.

Note: The screen will now flash between flow rate and gallons remaining until next regeneration.

If water was tested by Master Water Conditioning, follow recommendations on water analysis, for hardness setting.

Final Check:

1. Fill the brine tank with Solar Salt and the Res-Up Feeders with Res-Up (one quart is provided).
2. Make sure the drain line connection meets all plumbing codes and that the drain line size can handle the backwash flow rate of the softener.
3. Make sure the Inlet and Outlet on bypass valve are open.
4. Make sure the control valve timer is plugged into an electrical outlet with power 24 hours per day.
5. Check all piping for leaks.

Disinfection of Water Conditioners

The materials of construction of the modern water conditioner will not support bacterial growth, nor will these materials contaminate a water supply. However, the normal conditions existing during shipping, storage and installation indicate the advisability of disinfecting a conditioner after installation, before the conditioner is used to treat potable water. In addition, during normal use, a conditioner may become fouled with organic matter or in some cases with bacteria from the water supply.

Thus every conditioner should be disinfected after installation, some will require periodic disinfection during their normal life, and in a few cases disinfection with every regeneration would be recommended.

Depending upon the conditions of use, the style of conditioner, the type of ion exchanger, and the disinfectant available, a choice can be made among the following methods.

Sodium or Calcium Hypochlorite

Application

These materials are satisfactory for use with polystyrene resins, synthetic gel zeolite, greensand and bentonites.

5.25% Sodium Hypochlorite

These solutions are available under trade names such as Clorox Bleach*. If stronger solutions are used, such as those sold for commercial laundries, adjust the dosage accordingly.

1. Dosage
 - a. Polystyrene resin: 1.2 fluid ounces per cubic foot.
 - b. Non-resinous exchangers: 0.8 fluid ounce per cubic foot.

*Clorox is a registered trademark of The Clorox Company.

2. Brine tank conditioners

- a. Backwash the conditioner and add the required amount of hypochlorite solution to the brine well of the brine tank. (The brine tank should have water in it to permit the solution to be carried into the conditioner.)
- b. Proceed with the normal regeneration.

Calcium Hypochlorite

Calcium hypochlorite, 70% available chlorine, is available in several forms including tablets and granules. These solid materials may be used directly without dissolving before use.

1. Dosage

- a. Two grains (approximately 0.1 ounce) per cubic foot.

2. Brine tank conditioners

- a. Backwash the conditioner and add the required amount of hypochlorite to the brine well of the brine tank. (The brine tank should have water in it to permit the chlorine solution to be carried into the conditioner.)
- b. Proceed with the normal regeneration.

Troubleshooting

Symptom: Water conditioner fails to regenerate. No soft water.

Possible Cause	Solution
Power supply to 762 control has been interrupted.	Determine reason for power interruption and correct. Reset time of day.
Water pressure lost.	Restore water pressure.
For 762 series turbine failure.	Clean or replace turbine.
Corrupted programming of 762 Logix timer.	Reprogram timer assembly.
Defective 762 Logix timer.	Replace timer assembly.
No salt in brine tank.	Add salt and regenerate.
Manual bypass valve is open.	Close manual bypass valve.
Leak at riser pipe seal.	Insure that riser pipe is properly sealed at o'ring seal. Inspect pipe for cracks.
Insufficient brine.	Check brine float height and clean assembly if necessary. Check flow rate capabilities of safety float and air check assembly.
Plugged injector or injector screen.	Inspect and clean injector and/or injector screen.

Symptom: No Brine Draw

Possible Cause	Solution
Plugged injector or injector screen.	Inspect and clean injector and/or injector screen.
Insufficient water pressure.	Increase water pressure above 25 psig (172kPa) minimum.
Corrupted programming of 762 Logix timer.	Reprogram timer assembly.
Defective 762Logix timer.	Replace timer assembly.
Obstructed drain line.	Remove obstruction.

Symptom: Insufficient brine draw

Possible Cause	Solution
Partially clogged injector or injector screen.	Inspect and clean injector and/or injector screen assembly.
Restricted flow rate in brine line.	Check flow rate capabilities of the safety float/aircheck assembly.
Insufficient water pressure.	Increase water pressure above 25 psig (172kPa) minimum.
Excessive back pressure on injector due to elevated drain line.	Reduce drain line elevation to height of valve.
Damaged valve disk.	Replace all valve disks.
Partially restricted drain line.	Remove restriction.

Symptom: Insufficient Refill to Brine Tank

Possible Cause	Solution
Brine refill control	Remove and clean
Restricted flow rate in brine line.	Check flow rate capabilities of the safety float/aircheck assembly.

Symptom: Excessive Water in Brine Tank

Possible Cause	Solution
Plugged drain line flow control.	Clean flow control.
Plugged injector and/or injector screen	Inspect and clean injector and/or screen.

Symptom: Loss of Media to Drain

Possible Cause	Solution
No flow control installed in drain line.	Install drain line flow control.

Symptom: Leak to Drain

Possible Cause	Solution
No flow control installed in drain line.	Install drain line flow control.
Insufficient water pressure.	Increase water pressure above 25 psig (172kPa) minimum.
Damaged valve disk or obstruction in valve disk.	Inspect and if damaged, replace all valve disks or remove obstruction.

Symptom: Loss of Water Pressure

Possible Cause	Solution
Fouled resin bed due to iron accumulation.	Clean control valve and mineral bed with cleaner.
Slots in riser pipe or laterals are filled with resin fines.	Inspect and clean distributor pipe slots as needed.

Symptom: Salt in Water to Service After Regeneration


Possible Cause	Solution
Injector is too small for system size.	Install correct injector
Brine draw time excessively long due to low water pressure.	Increase water pressure above 25 psig (172 kPa) minimum.
Restricted drain line.	Remove drain line restriction.
Insufficient rinse volume.	Increase slow rinse time, fast rinse time, or both.
Damaged valve disk.	Replace all valve disks.
Plugged injector and/or injector screen.	Inspect and clean injector and/or injector screen.

TROUBLESHOOTING

700 Series Controller Troubleshooting

Problem	Possible Cause	Solution
ERR 1 is displayed	Controller power has been connected and the control is not sure of the state of the operation.	Press the UP arrow and the control should reset.
ERR 2 is displayed	Controller power does not match 50 or 60 Hz.	Disconnect and reconnect the power. If problem persists, obtain the appropriate controller or AC adapter for either 50 or 60 Hz power.
ERR 3 is displayed	Controller does not know the position of the camshaft. Camshaft should be rotating to find Home position.	Wait for two minutes for the controller to return to Home position. The hourglass should be flashing on the display indicating the motor is running.
	Camshaft is not turning during ERR 3 display.	Check that motor is connected. Verify that motor wire harness is connected to motor and controller module. Verify that optical sensor is connected and in place. Verify that motor gear has engaged cam gear. If everything is connected, try replacing in this order: —Wire harness —Motor —Optical sensor —Controller
	If camshaft is turning for more than five minutes to find Home position:	Verify that optical sensor is in place and connected to wire. Verify that camshaft is connected appropriately. Verify that no dirt or rubbish is clogging any of the cam slots. If motor continues to rotate indefinitely, replace the following components in this order: —Wire harness —Motor —Optical sensor —Controller
Four dashes displayed: — — : — —	Power failure occurred	Press SET to reset the time display.

Performa Exploded View

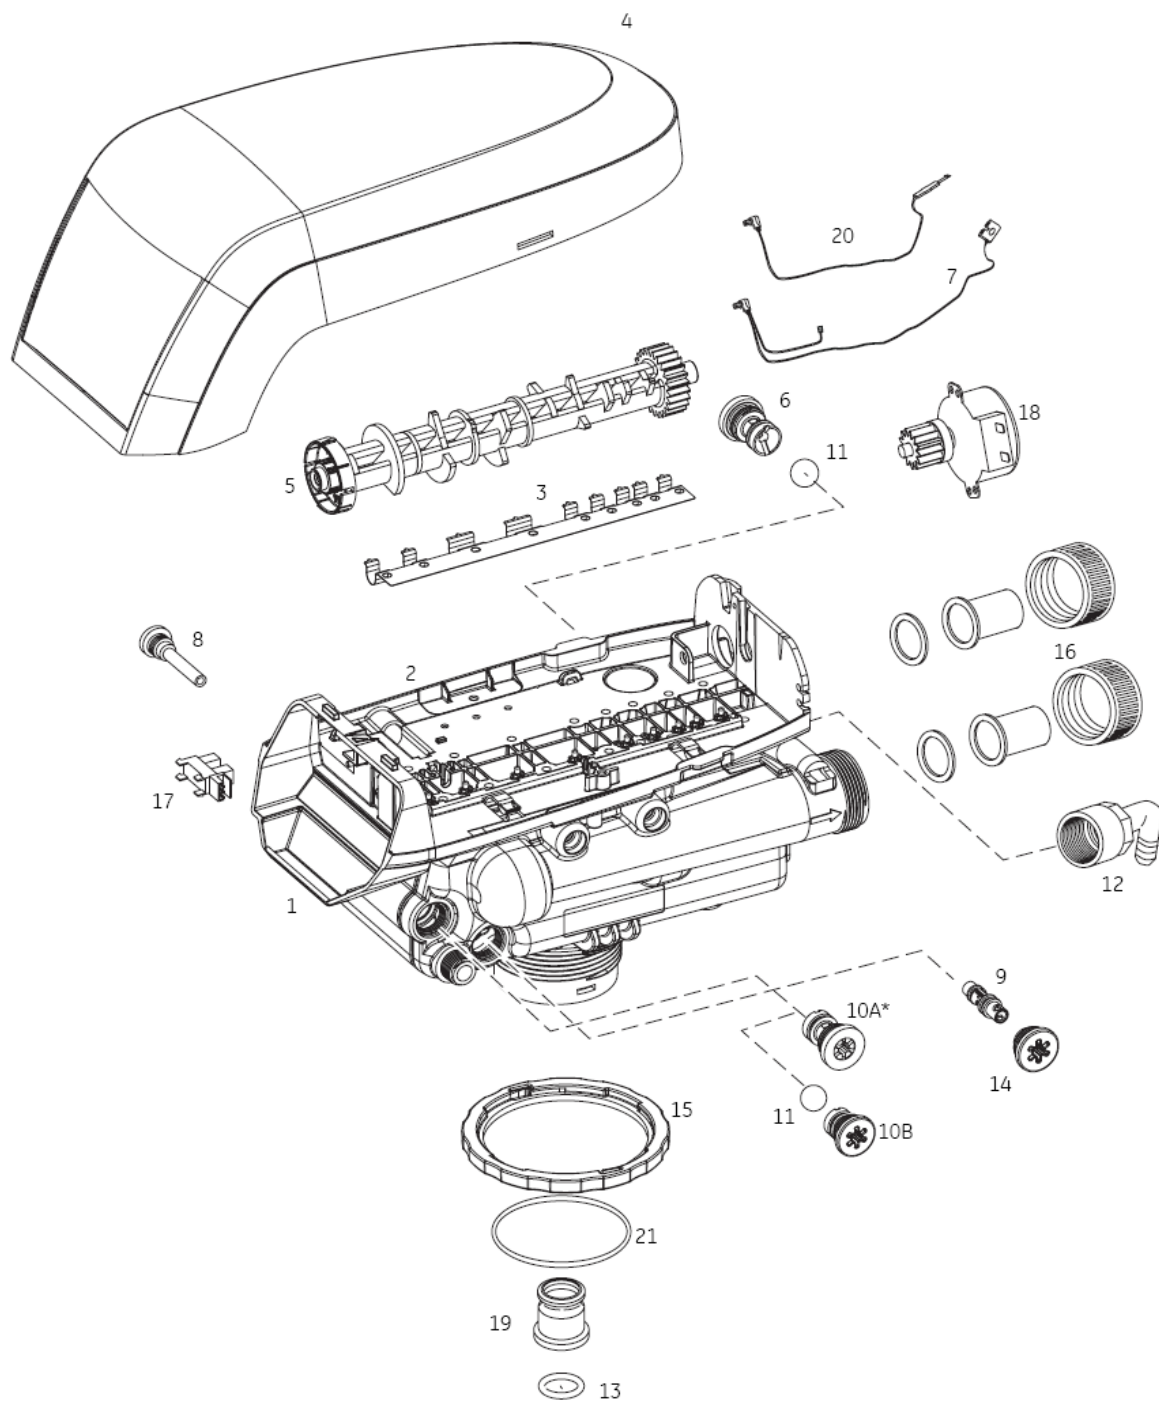


*Warning: Do not use the flow control ball with #10A.

Performa Parts List


Part				Part			
Code	No.	Description	Qty.	Code	No.	Description	Qty.
1	1244651	Valve Assembly w/o Flow Controls	1	1035735	"K" Injector (High Efficiency) - Pink		
2	1235338*	Top Plate, 268/700 Series Valves	1		(12-inch tank)		
3	1235339*	Valve Disc Spring, One Piece, Performa Valve	1	1035736	"L" Injector (High Efficiency) - Orange		
					(13 & 14-inch tanks)		
4	1236246*	Cover, Valve, 255/Performa 700/860 Series Controller	1	1032978	Plugged Injector for 263 Filter		
				1032985	Plugged Injector Cap		
5		Performa Logix Camshafts	1	10A 1000222	Regenerant Refill Controller, No Bal, 0.33 gpm	1	
	1235352*	Cam, 263-268/700-860 Series Valve, STD, Black		10B 1243510	Regenerant Refill Controller		
	1237402*	Cam, 269/700-860 Series Valve, STD, Green		11 1030502	Ball, Refill Flow Control		
	1237403*	Cam, 273/700-860 Series Valve, STD, Gray		* 1030334	Plugged Refill Flow Control - for 263 Valve		
	1237404*	Cam, 273/700-860 Series Valve, TWIN (insert)		12 1002449	Drain Fitting Elbow (3/4-inch hose barbed)	1	
	1237405*	Cam, 278/700-860 Series Valve, STD, Brown		13 1010428	O-Ring	1	
	1237406*	Cam, 278/700-860 Series Valve, TWIN, Tan (insert)		14 1000269	Injector Cap with O-Ring	1	
6		Drain Control Assembly:	1	15 1035622	Tank Ring	1	
	1000209	No. 7 (1.3 gpm; 4.9 Lpm)		* 1041174	Valve Disc Kit: Standard		
	1000210	No. 8 (1.7 gpm; 6.4 Lpm)		16	Plumbing Adapter Kits:	1	
	1000211	No. 9 (2.2 gpm; 8.3 Lpm)		1001606	3/4-inch Copper Tube Adapter Kit		
	1000212	No. 10 (2.7 gpm; 10.2 Lpm)		1001670	1-inch Copper Tube Adapter Kit		
	1000213	No. 12 (3.9 gpm; 14.76 Lpm)		1001608	22-mm Copper Tube Adapter Kit		
	1000214	No. 13 (4.5 gpm; 17 Lpm)		1001613	3/4-inch CPVC Tube Adapter Kit		
	1000215	No. 14 (5.3 gpm; 20 Lpm)		1001614	1-inch CPVC Tube Adapter Kit		
	1239760	Blending Valve Kit 900/700 Series Top Plate		1001615	25-mm CPVC Tube Adapter Kit		
*		Drain Line Flow Control (External)	1	1001769	3/4-inch NPT Plastic Pipe Adapter Kit		
	1030355	Drain Line Flow Control, 5 gpm (19 Lpm)		1001603	1-inch NPT Plastic Pipe Adapter Kit		
	1030356	Drain Line Flow Control, 6 gpm (22.5 Lpm)		1001604	3/4-inch BSPT Plastic Pipe Adapter Kit		
	1030357	Drain Line Flow Control, 7 gpm (26.5 Lpm)		1001605	1-inch BSPT Plastic Pipe Adapter Kit		
	1030358	Drain Line Flow Control, 8 gpm (30 Lpm)		1001611	3/4-inch BSPT Brass Pipe Adapter Kit		
	1030359	Drain Line Flow Control, 9 gpm (34 Lpm)		1001610	1-inch NPT Brass Pipe Adapter Kit		
	1030360	Drain Line Flow Control, 10 gpm (38 Lpm)		1001612	1-inch BSPT Brass Pipe Adapter Kit		
7	1235269	Motor/Optical Cable Assembly, 700 Series Controller	1	17 1235373	Module, Sensor, Photo Interrupter	1	
8	1000226	Screen/Cap Assembly w/ O-Ring	1	18 1235361	Motor w/Spacer & Pinion, 700 Series Controller, 12 V, 50/60 Hz	1	
9		Injector (High Efficiency) Options		19 1001986	13/16 inch Rubber Insert (Optional)	1	
	1035730	"E" Injector (High Efficiency) - Yellow (6-inch tank)		20 1235446	Turbine Cable	1	
	1035731	"F" Injector (High Efficiency) - Peach (7-inch tank)		21 1010154	Tank O-Ring	1	
	1035732	"G" Injector (High Efficiency) - Tan (8-inch tank)		* 1033444	Internal Turbine Meter		
	1035733	"H" Injector (High Efficiency) - Lt Purple (9-inch tank)		* 1233187	Motor Locking Pin		
	1035734	"J" Injector (High Efficiency) - Lt Blue (10-inch tank)		* 1299336	Chlorine Generator Kit		
				* 1033444	Turbine Assembly		
				* 1041174	Valve Disc Kit, Standard		
				* 1239979	Cable Harness, Remote Regen 740F		
				* 1239711	Switch Kit, Front Mount, 0.1 amp		
				* 1239752	Switch Kit, Front Mount 5 amp		
				* 1239753	Switch Kit, Top Plate Mount, 0.1 amp		
				* 1239754	Switch Kit, Top Plate Mount, 5 amp		

*Not shown on drawing.


Logix 700 Series Controllers Parts List

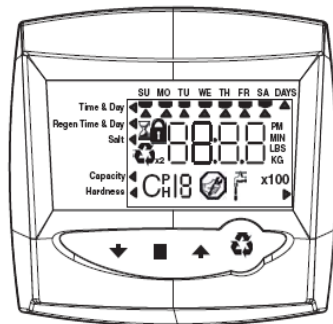

742/762 Control

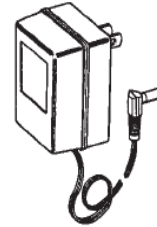

AC Adapter

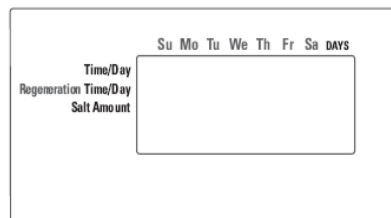

700 Control Overlays

Part				Part			
Code	No.	Description	Qty.	Code	No.	Description	Qty.
		Electronics Modules/Controllers	1			AC Adapter	
1242150		Logix 742 Controller		1000810		Japanese	
1242162		Logix 742 F Controller		1000811		North American	
1242168		Logix 762 Controller		1000812		Australian	
1242170		Logix 762F Controller		1000813		British	
		Electrical Components		1000814		European	
1235269		Motor/Optical Cable Assembly, 700 Series Control		1030234		Transformer Extension Cord 15 foot (4.5m)	
1235373		Module, Sensor, Photo Interrupter		1235448		North American Outdoor AC Adapter	
1235361		Motor w/Spacer & Pinion, 700 Series Controller 12V, 50/60 Hz				Overlays	
1244336		Refill Sensor Probe for Salt Detector Applications		1238472		Overlay, 716 Controller, English	
1256257		Remote Mount Kit		1238476		Overlay, 740C/742C Controller, English	

12 YEAR LIMITED WARRANTY

As of Oct. 1, 1995

This Residential Water Conditioner is warranted for a period of **one year** from date of purchase by first user against defects in materials and workmanship. In addition, the complete control valve is warranted for **five years**. The control valve body (excluding internals and electrical parts) is warranted for **six years**. The mineral tank, plastic brine tank or cabinet tank (excluding mineral) is warranted against rust, corrosion or bursting for a period of **twelve years** from date of manufacture. Except, as specifically set forth in this paragraph, Master Water Conditioning Corporation makes no other warranties, express or implied.

This warranty shall be void if the conditioner is moved from the place of original installation, or if damage is caused by misuse, misapplication, accident, freezing, flood, fire or if not installed in accordance with instructions furnished by Master Water Conditioning Corporation.

This warranty shall be void in the event of damages from external sources or where the conditioner has been operated at pressure in excess of 100 pounds per square inch or at a temperature greater than 100 degrees F. or less than 32 degrees F. Incidental costs or consequential damages are not covered by this warranty.

All defective parts shall be returned prepaid to Master Water Conditioning Corporation for inspection. **Master shall not be liable for labor charges other than Master factory repairs.**

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow limitations on duration of implied warranties or exclusion of incidental or consequential damages, so the above limitations may not apply to you.

All claims must be submitted in writing to Master Water Conditioning Corporation at 224 Shoemaker Road, Pottstown, Pennsylvania 19464 within thirty (30) days from the discovery of the defect. Master Water Conditioning Corporation thereafter will correct defective parts and workmanship or rusting, corrosion or bursting within sixty (60) days.

Failure to notify Master by completing, signing and returning the registration card within twenty (20) days of the purchase shall void the warranty.



MASTER
Water Conditioning Corp.

224 Shoemaker Rd. Pottstown, Pa. 19464